Bypass Device User manual



To activate bypass functionality of device switch number 8 should be ON.

In this mode if SW8 is ON device will perform bypass of the immobilizer otherwise will enable immobilizer.

DIP switches 6 and 7 in this mode also are applicable. Functionality of these switches is following:

SW6 SW7 Function

OFF OFF Device will work in automatic mode.

OFF ON Device will try directly connection with EDC16 engine control unit.

ON ON Device will try directly connection with EDC15 engine control unit.

ON OFF Device will try directly connection with ME7x engine control unit.

Procedure for usage of device in this mode is following:

- 1. Adjust switches depends your needs. If for you is not quite clear type of engine control unit better is to put SW6 and SW7 to OFF by this way device will try different type engine control units
- 2. Turn ignition of the vehicle to ON
- 3. Put device in OBDII socket and wait until green and yellow LEDs becomes to blink simultaneously
- 4. Remove device from OBDII socket. Turn ignition off for 3 sec.