DE

Nachdruck und Vervielfältigungen jeder Art, auch auszugsweise, sind ohne schriftliche Genehmigung untersagt. Copyright © 1997-2018 by Bernd Jacobi - Multipick.

www.multipick.com

Das QUICK-KEY EASY- Pro ist kein Kinderspielzeug, sondern eine professionelle Problemlösung, die international bei Polizeibehörden und Diensten Anwendung findet. Etwas handwerkliches Geschick und Übung sind für erstklassige Ergebnisse erforderlich. Der kopierte Schlüssel ist nicht so stabil wie ein vom Schlüsseldienst hergestellter Schlüssel aus Stahl oder Messing und ist daher für eine permanente Benutzung NICHT geeignet.

Unser Tipp

Wenn das Schloss hakt, riskieren Sie den neu gegossenen Schlüssel abzudrehen (abzubrechen). Um das zu vermeiden sollten Sie folgendes tun:

Feilen Sie als erstes eine Kerbe in den gegossenen Schlüssel. Jetzt können Sie einen Schraubendreher als Drehhilfe nutzen. So besteht keine Gefahr, dass der Schlüssel „abdreht“ und der abgebrochene Bart im Schloss steckt.

Multipick®

Herzlichen Glückwunsch zu Ihrem neuen Quick Key Easy - Pro.
Mit Ihrem Kauf schenken Sie uns und unserem Produkt Ihr Vertrauen. Wir garantieren Ihnen ein Top Produkt, welches Sie sicher nicht enttäuschen wird. Nicht umsonst ist das Multipick Quick Key Easy - Pro eines der meist verkauften Schlüsselkopiersysteme weltweit. Aber schreiben kann man viel, wir schlagen vor, Sie probieren es einfach aus. Viel Spaß und Erfolg beim Reproduzieren Ihres ersten Schlüssels.

Was Sie als erstes tun sollten:
Alles gut vorbereiten, damit Ihre Schlüsselkopie gelingt.
Jetzt geht‘s los

1.Form aufschrauben und bereit legen.

2.Zwei Beutel (ein markierter, ein unmarkierter) der Abformmasse mischen und zu einer gleichmäßigen Masse verkneten (5 – 10 Sekunden! Bitte keine Schutzhandschuhe anziehen, die Masse ist völlig ungefährlich). Jetzt sofort mit der weiteren Verarbeitung fortfahren. Der ganze Prozess bis Punkt 6 darf nicht länger als 2 Minuten dauern!*

3.Beide Gießformhälften mit der selben Menge Abformmasse füllen und glätten.

4.Etwas Talkumpuder auf die Flächen aufbringen und vorsichtig verstreichen.

5.Den Schlüssel auf eine Gießformhälfte auflegen (nicht eindrücken).

6.Beide Gießformhälften mit Hilfe der Überwurfhülse handfest anziehen. Kurz warten bis die Masse abgebunden hat.

7.Überwurfhülse abschrauben und beiden Gießformhälften trennen. Original-Schlüssel wieder entnehmen.

8.Form mit dem Negativabdruck wieder handfest verschrauben und mit dem Messer einen kleinen Einfülltrichter in die Formmasse schneiden. Das erleichtert gleich das Einfüllen des Gießmetalls.

9.Spezial-Gießmetall in der Gießkelle schmelzen und in einem einzigen Schwung in die Negativform gießen - fertig.

10.Jetzt bitte noch kurz abkühlen lassen und dann erst die Überwurfhülse abschrauben und die beiden Gießformhälften trennen.

11.Nun haben Sie eine exakte Kopie Ihres Schlüssels gegossen. Sollte er nicht sofort passen, können Sie mit einer Feile kleine Kanten oder Ecken der Kopie wegfeilen. Bei zu vielen Lufteinschlüssen Schlüssel erneut gießen.

Glückwunsch Sie haben einen Schlüssel erstellt.

1.

2.

3.

4.

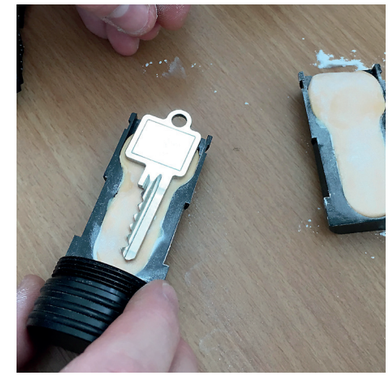

5.

6.

7.

8.

9.

9.

10.

11.

*Falls Sie mehrere Schlüssel nacheinander herstellen wollen, bitte nach jedem Mischvorgang die Hände waschen, um Spuren der Härtungsmasse zu eliminieren

EN

Unauthorized Copying, Reproduction or Republishing any of the material without written consent is strictly prohibited.
Copyright © 1997-2018,
by Bernd Jacobi - Multipick.

www.multipick.com

The Quick-Key Easy - Pro is not a toy for children, but a professional solution that is used internationally by law enforcement agencies and services. A bit of craftsmanship and practice is required for best results. The copied key is not as stable as a steel or brass key made by a locksmith and is therefore NOT suitable for permanent use.

Our tip!

If the lock jams, you risk shearing the newly cast key (breaking it off).
To avoid this, you should do the following:

First, file a notch in the key you cast. Now you can use a screwdriver to help you turn the key. This will eliminate any danger of the key „shearing“ off and leaving the broken portion in the lock.

Multipick®

Congratulations on your new Quick-Key Easy - Pro.
Your purchase is a vote of trust for us and our product. We guarantee that you've acquired a top-notch product that will not disappoint. After all, it is not without reason that the Multipick Quick-Key Easy - Pro is one of the best-selling key copying systems worldwide. But enough said – we suggest you simply give it a try. Have fun, and here's to your success in copying your first key.

What you should do first: make sure to prepare everything well so that your key copy is a success.

Let's get started

1.Unscrew the mould and set to one side.

2. Mix two sachets (one labeled, one unlabeled) of the impression material and knead it into a smooth compound (5 – 10 seconds! Don't use protection gloves, the material is completely harmless). Starting from now you have no longer than 2 minutes to complete the whole process up to point 6!*

3.Fill both halves of the mould with the same amount of impression compound and smooth.

4.Apply some talcum powder to the surfaces and spread cautiously.

5.Place the key on one side of the mould (do not press in).

6.Screw both halves of the mould together (hand-tight) using the coupling sleeve. Wait a short while until the impression compound hardens.

7.Unscrew the sleeve and separate both mould halves. Remove the original key.

8.Hand-tight again the mould with the negative imprint and cut a small feed funnel into the moulding compound with a knife. This makes it easier to fill it with the casting metal.

9.Melt the special casting metal in the ladle and pour it through the feed funnel into the negative form in one go – that's it.

10.Let cool for a few moments, then unscrew the coupling sleeve and separate the two mould halves.

11.Now you've cast an exact copy of your key. If it doesn't fit right away, you can use a file to file away small edges or corners of the copy. If there are too many air pockets, recast the key.

Congratulations – You've created a key.

1.

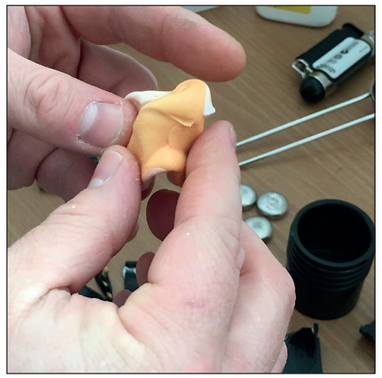

2.

3.

4.

5.

6.

7.

8.

9.

9.

10.

11.

*If you intend to copy several keys one after the other, please wash you hands after each mixing process to eliminate any traces of the hardener.